


- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. APPLY FIRESTONE LAP SEALANT ON CUT EDGES OF REINFORCED MEMBRANE AND PERIMETER OF QUICKSEAM CORNER FLASHING. REFER TO LS-9 FOR SEAM EDGE TREATMENT.
 3. USE APPROPRIATE FIRESTONE PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

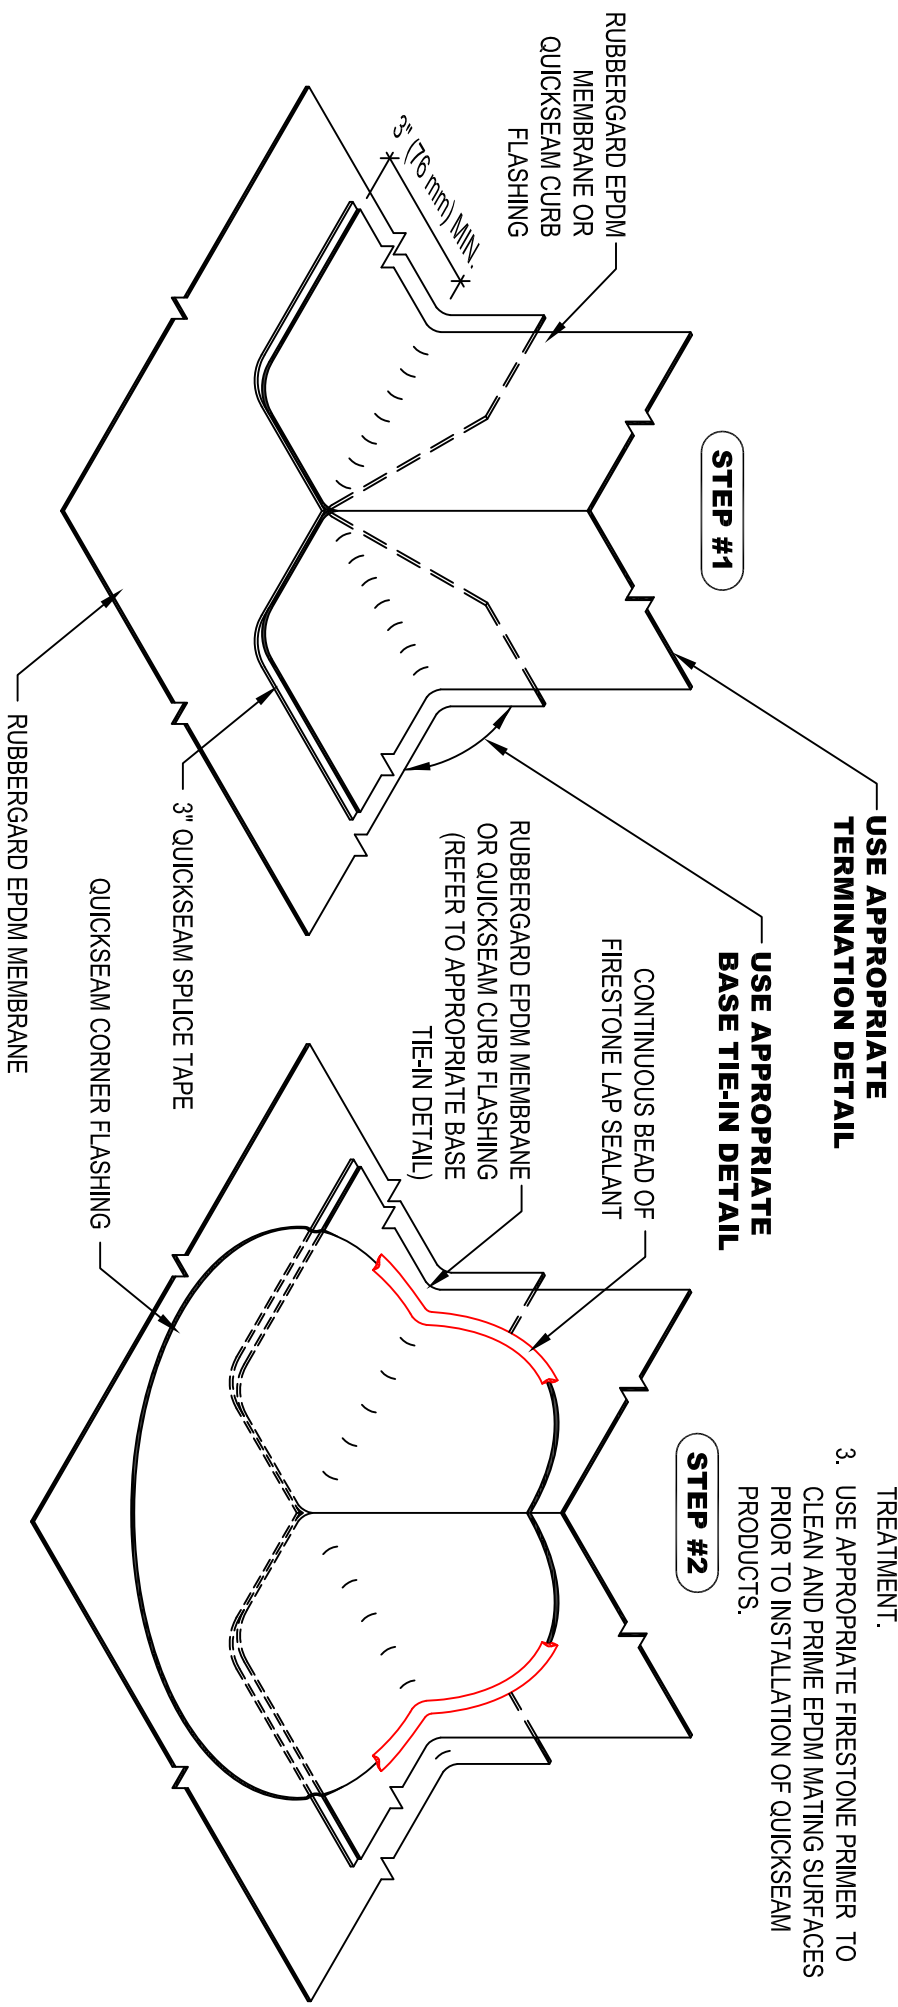

STEP #1

STEP #2

USE APPROPRIATE TERMINATION DETAIL

USE APPROPRIATE BASE TIE-IN DETAIL

MAXIMUM WARRANTY: 20 YEARS